




CHECKERS

Justrite Safety Group

SAFETY RIDER[®] VULCANIZED RUBBER SPEED HUMP

PRODUCT INFORMATION BROCHURE

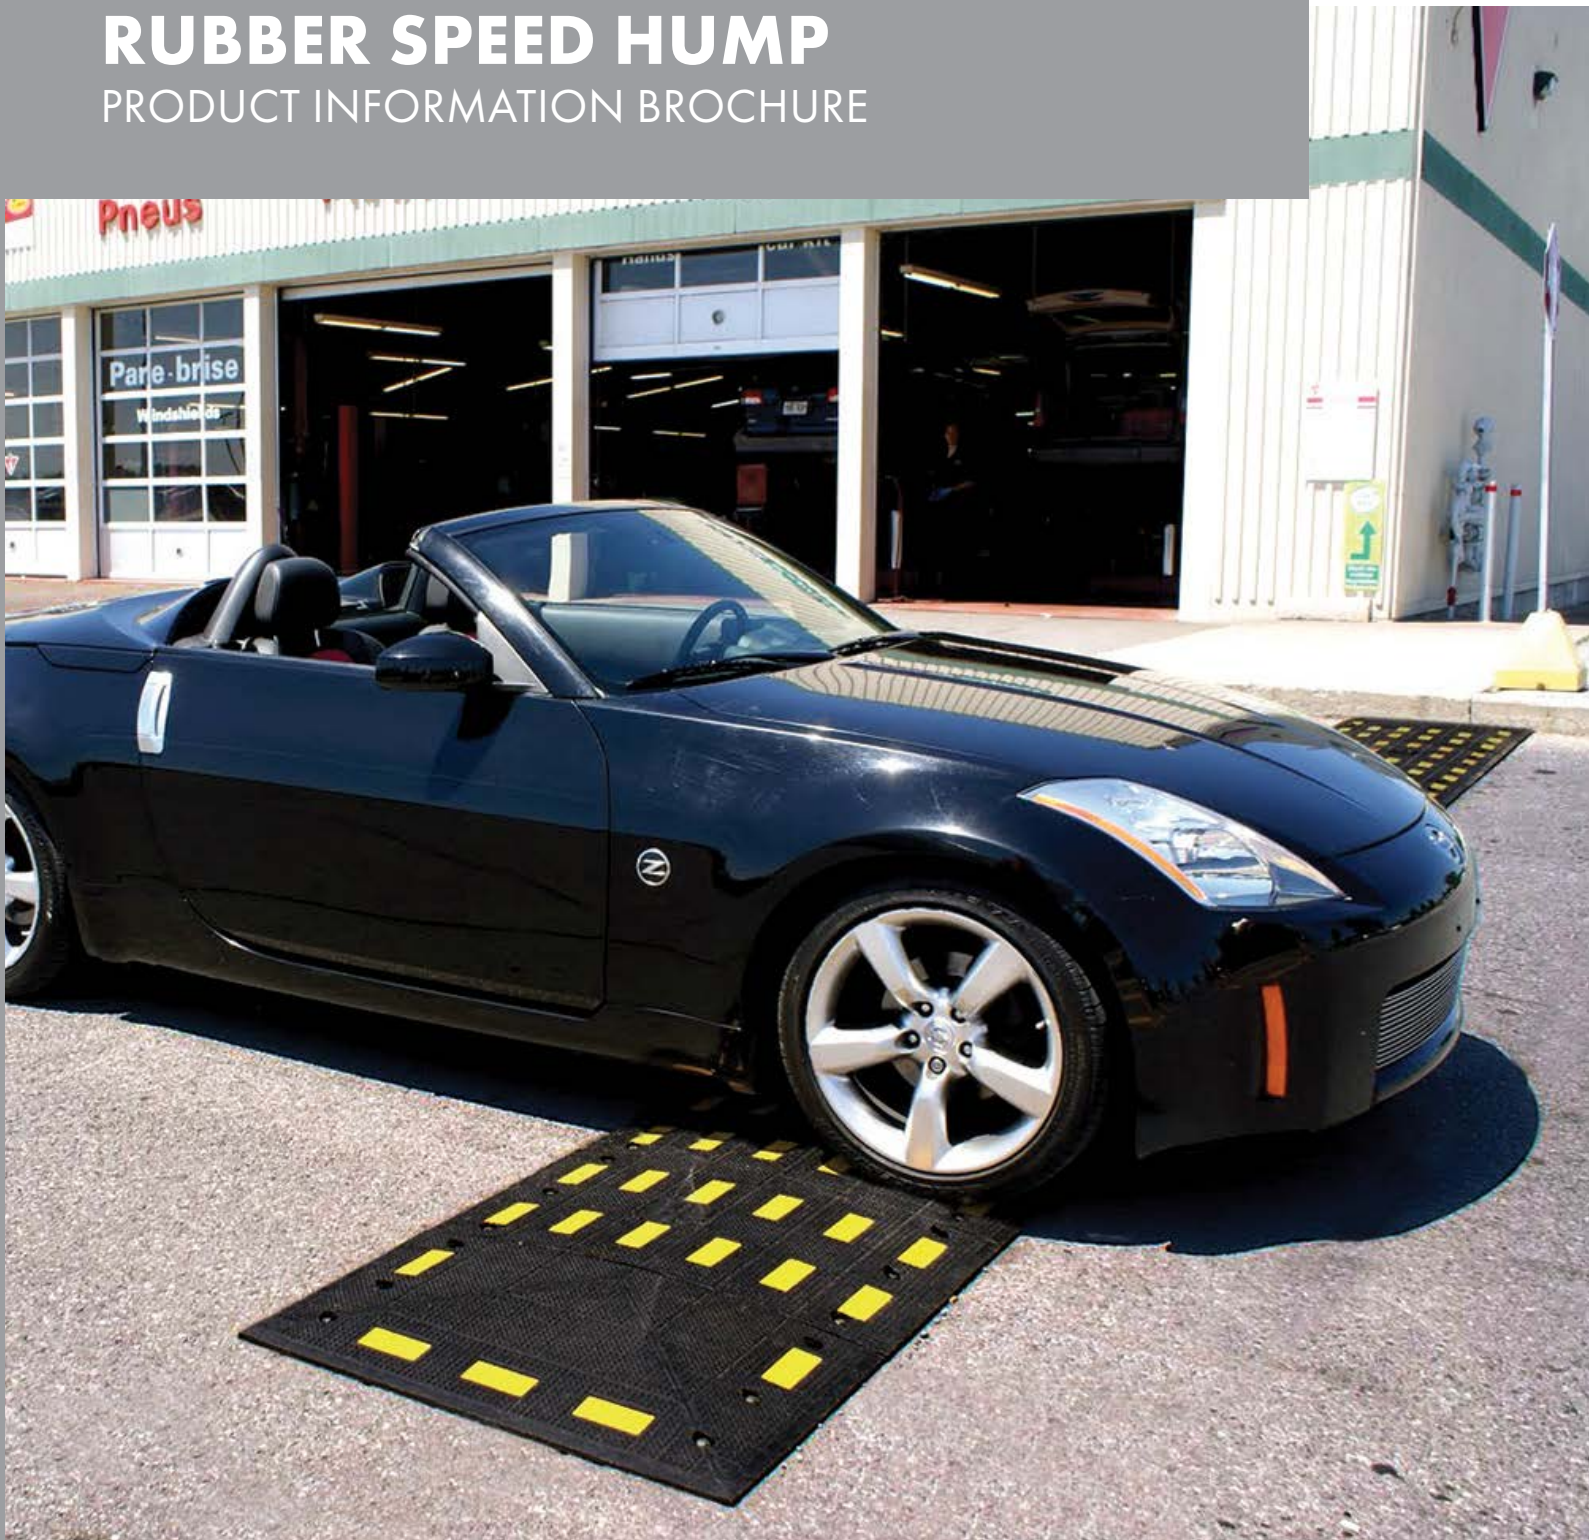



PICTURED: SAFETY RIDER SPEED HUMPS

Checkers™ is a full-service manufacturer of parking lot safety solutions. We design and manufacture traffic control products that help cars navigate and park safely. Our main goal has been to create solutions that protect motorists and pedestrians from the perils of today's parking lots. As such, Checkers™ products have been designed and developed with speed reduction, driver and pedestrian safety in mind. All our solutions are manufactured from 100% recycled rubber and plastic. Our speed bumps or parking blocks, for example, are longer lasting, highly visible, and more car-friendly than asphalt or concrete alternatives. Not only are Checkers™ traffic safety solutions environmentally friendly, they can also be installed for either temporary or permanent use.

- **Rubber speed humps greatly outlast asphalt competitors**
- **Rubber speed humps don't degrade, keeping parking lots and streets aesthetically pleasing**
- **High-quality vulcanized rubber is manufactured with sulfur additives to be stronger than traditional rubber**
- **Recycled rubber construction is environmentally friendly**
- **Pliable rubber protects vehicles while slowing them**
- **Highly reflective colored tape ensures the speed hump will be visible**
- **Easy to install, either on asphalt or concrete surfaces**
- **Can be used for temporary or permanent applications**
- **Great for commercial and residential applications**
- **Mounting hardware included with the purchase of a speed hump**
- **End caps are available and should be installed**


PRODUCT INFORMATION

The Safety Rider® Vulcanized Speed Hump is an economical solution designed to slow traffic to 10-15 mph (approximate) while maintaining a continuous traffic flow. Made from vulcanized rubber, the module units can be combined to cover the width of any roadway. The molded rubber pattern provides an anti-skid surface to help prevent vehicles and pedestrians from slipping. Ready to pick-up and install, rain or shine, the Safety Rider® vulcanized speed hump is a durable solution for any location where slow traffic is required.

Material: Premium vulcanized recycled rubber

- Interlocking design expands to any road width
- Tongue and groove system keeps product firmly in place
- High visibility with tape on mid-sections and end caps
- Easy installation on any paved surface
- Lightweight and perfect for permanent or temporary use
- Maintenance free
- Warranty: 3 years on the product; 1 year on the tape (under normal use)

⚠️ WARNING: This product can expose you to chemicals including Arsenic, Cobalt, Cadmium, Lead, Chromium, Nickel Compounds, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

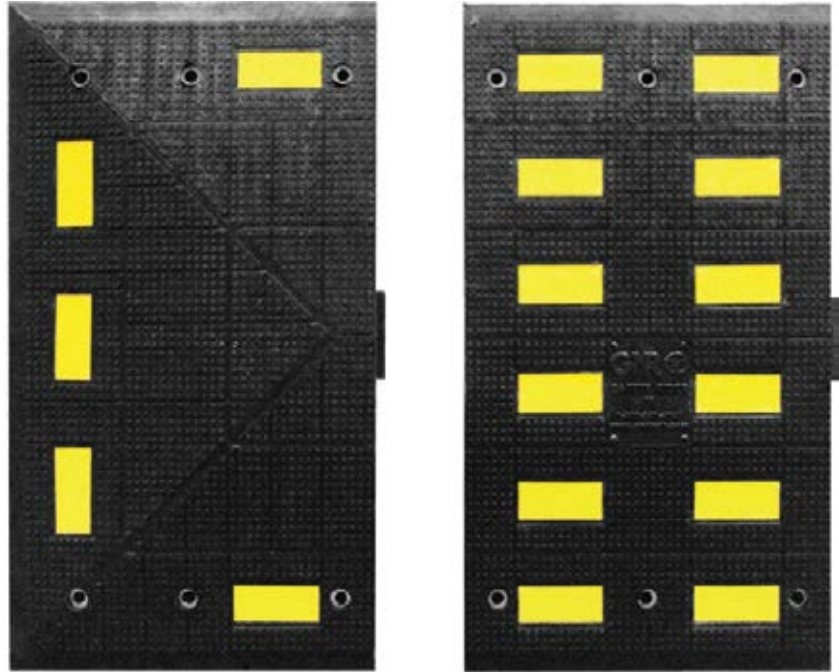


APPLICATIONS

- Traffic Control
- Parking Lots
- Facility Protection
- Street Maintenance
- Event Venues
- Residential Areas

SPECIFICATIONS

Model	Description	Length	Height	Width	Weight	Bolts needed
23500V	Speed Hump	35.4 in. (90 cm)	2 in. (5.1 cm)	19.7 in. (50 cm)	36 lbs. (16.4 cm)	6
23501V (f end cap)	Female End Cap	35.4 in. (90 cm)	2 in. (5.1 cm)	19.7 in. (50 cm)	32 lbs. (16.4 cm)	6
23502V (m end cap)	Male End Cap	35.4 in. (90 cm)	2 in. (5.1 cm)	19.7 in. (50 cm)	32 lbs. (16.4 cm)	6



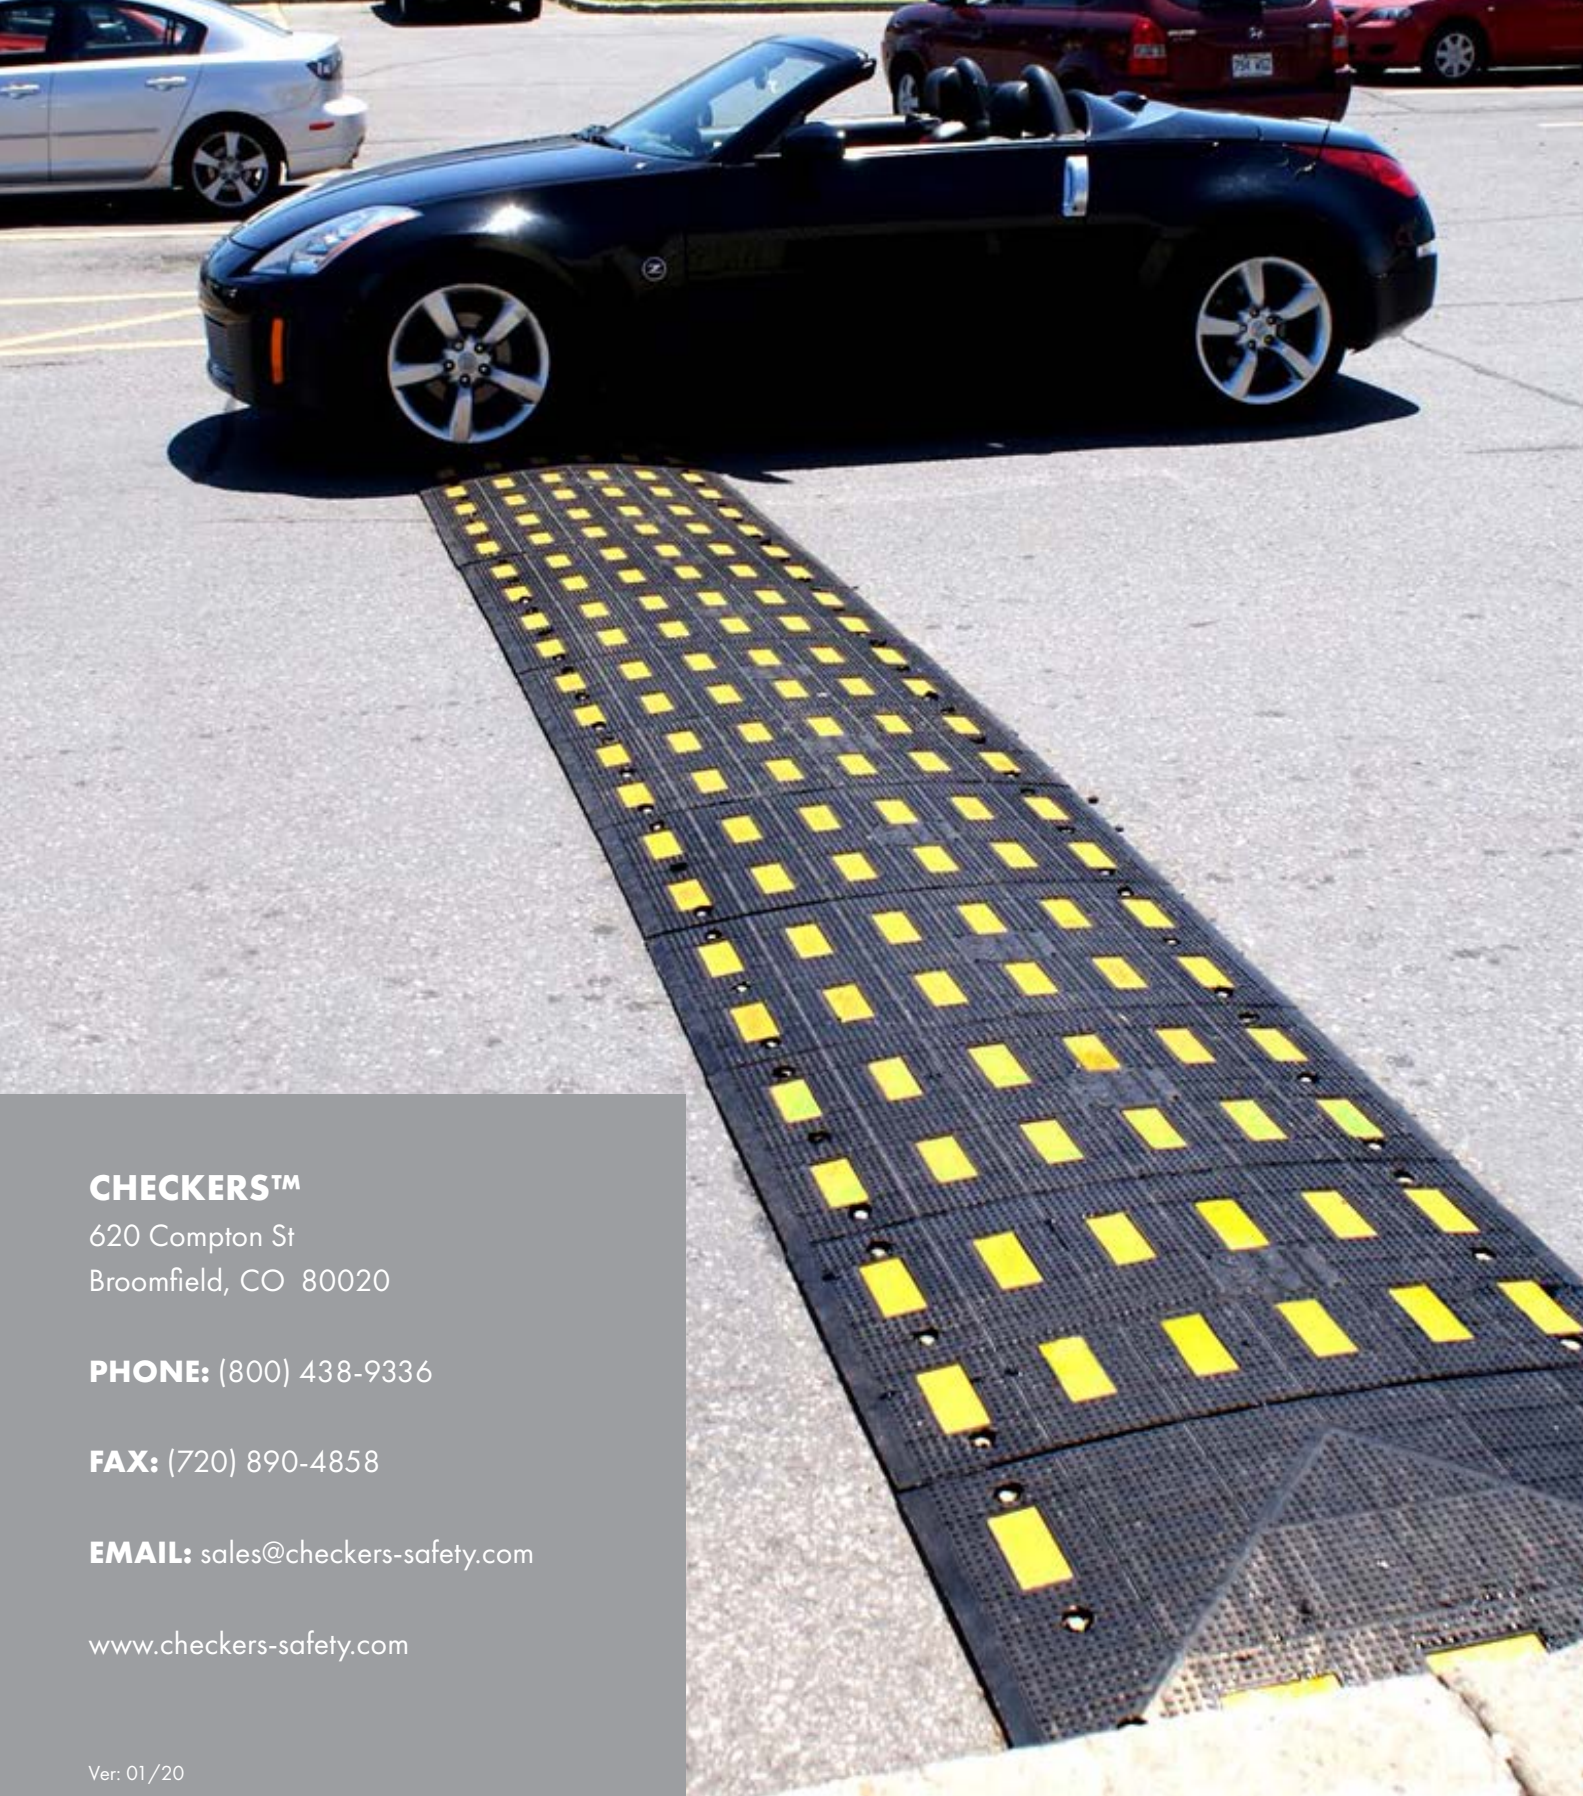

CHECKERS™

620 Compton St
Broomfield, CO 80020

PHONE: (800) 438-9336

FAX: (720) 890-4858

EMAIL: sales@checkers-safety.com

www.checkers-safety.com

Ver. 01/20

A PRODUCT OF:



Justrite Safety Group is the leading source of safety equipment for flammables and hazardous materials storage and handling, asset protection, environmental protection spill containment, absorbents, specialized chemical storage, cable management, safety showers, eye/face washes, matting, and vehicle safety equipment. Learn more at Justrite.com, Checkers-safety.com, and Notrax.com.