

The ORIGINAL Ground Protection Mats

Don't be fooled by knock-offs!



AlturnaMATS® Ground Protection Mats

- Highest load bearing capacity on the market, ideal for heavy equipment—add stability and traction in unstable or harsh conditions
- Aggressive diamond cleat tread for maximum traction
- Protect grass and soft or sensitive ground from damage




The original ground protection mat—protect your turf and never get stuck again

With an aggressive diamond plate tread, AlturnaMATS add stability and traction in unstable or harsh conditions. At 0.5-in. thick, the mats are virtually indestructible. The industry-leading load-bearing capacity of 120 tons* protects sensitive turf from heavy equipment, saving thousands in ground restoration costs. Ideal for use over soft or sensitive ground conditions in a variety of industries—use as a vehicle track way, parking area, or staging area for supplies and equipment.

Manufactured from 100% recycled high-density polyethylene, AlturnaMATS are durable and weather-resistant. The flexible construction follows the contours of the ground, delivering a highly effective access solution on sloping or undulating ground conditions. Mats are lightweight, easily deployed by hand, and are available with optional hand holes.

- Diamond cleat tread surface provides impressive grip
- Keep equipment from getting stuck, even in soft conditions
- Prevent damage and leave turf smooth—mats disperse weight evenly to prevent soil compaction or ruts
- Connect together to build a roadway or working platform in minutes—use accessory connectors to ensure a firm and secure trackway
- Mat-Pak bundles are available, offering a complete, convenient package ready to load onto your truck bed—includes 12 mats, 20 single Turn-A-Links, 2 Handi-Hooks, 2 ratchet straps and a metal skid rack
- Limited lifetime warranty

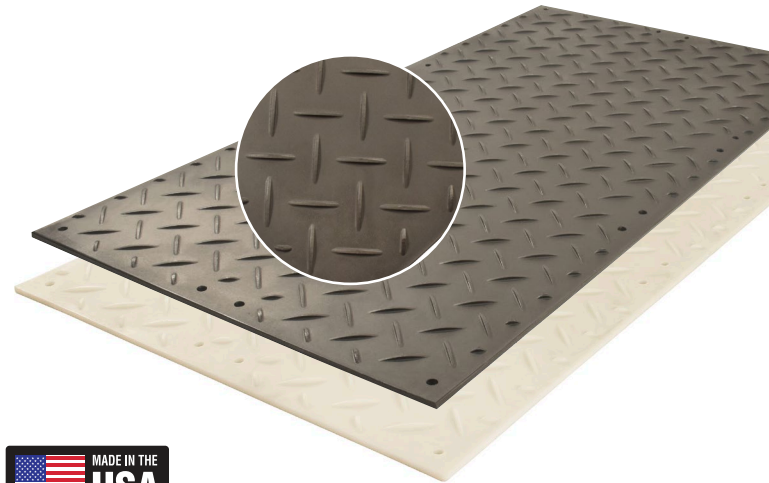

Clear Mats: the Clear Choice for Healthy Lawns

Clear mats are translucent to let the sun shine through preventing browning of grass—ideal for golf courses, resorts, homes and cemeteries.



Effects after 5 days: (left to right: clear mat, white mat, black mat)

Black mats show heavy browning of grass & burnt leaves.
White mats show moderate browning & slightly burnt leaves.
Clear mats show no damage.

White mats not available.

Load capacity*	120 tons (240,000 lb; 108,862 kg)
Surface tread	Two standard options: 1) Diamond cleat (both sides) or 2) Diamond cleat/smooth
Material	100% recycled high-density polyethylene (HDPE)
Thickness	0.5 in (1.27 cm)
Color options	Black or Clear

*Load bearing capacity is subject to ground conditions.
Sizing is subject to a manufacturing variance of +/- 5%.

Diamond Cleat (both sides) Models	Diamond Cleat / Smooth Models	Description	Length	Width	Weight	CA Prop 65
AM24	AM24S1	Black Mat	4 ft (1.22 m)	2 ft (0.61 m)	21.5 lb (9.8 kg)	⚠
AM26	AM26S1	Black Mat	6 ft (1.83 m)	2 ft (0.61 m)	32.4 lb (14.6 kg)	⚠
AM28	AM28S1	Black Mat	8 ft (2.44 m)	2 ft (0.61 m)	43 lb (19.5 kg)	⚠
AM36	AM36S1	Black Mat	6 ft (1.83 m)	3 ft (0.91 m)	51 lb (23.1 kg)	⚠
AM38	AM38S1	Black Mat	8 ft (2.44 m)	3 ft (0.91 m)	64 lb (29.3 kg)	⚠
AM48	AM48S1	Black Mat	8 ft (2.44 m)	4 ft (1.44 m)	86 lb (39 kg)	⚠
CM24	CM24S1	Clear Mat	4 ft (1.22 m)	2 ft (0.61 m)	21.5 lb (9.8 kg)	—
CM26	CM26S1	Clear Mat	6 ft (1.83 m)	2 ft (0.61 m)	32.4 lb (14.6 kg)	—
CM28	CM28S1	Clear Mat	8 ft (2.44 m)	2 ft (0.61 m)	43 lb (19.5 kg)	—
CM36	CM36S1	Clear Mat	6 ft (1.83 m)	3 ft (0.91 m)	51 lb (23.1 kg)	—
CM38	CM38S1	Clear Mat	8 ft (2.44 m)	3 ft (0.91 m)	64 lb (29.3 kg)	—
CM48	CM48S1	Clear Mat	8 ft (2.44 m)	4 ft (1.44 m)	86 lb (39 kg)	—

⚠ **WARNING:** This product can expose you to chemicals including carbon black, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.