

# The ORIGINAL Ground Protection Mats

Don't be fooled by knock-offs!



## TrakMAT® Ground Protection Mats

- Power cylinder tread improves grip—protect lawns from damage and keep vehicles from getting stuck
- 90-ton load bearing capacity is ideal for vehicles and heavy equipment
- Lightweight for fast setup—easily deploy by hand






## Add traction while protecting lawns and other surfaces from vehicles or heavy equipment

TrakMAT features a unique power cylinder tread surface to improve grip and forward motion of vehicles. The 90 tons\* load bearing capacity is designed to allow large vehicles to easily traverse grass, sidewalks, driveways and more without causing damage. TrakMAT prevents vehicles from getting stuck in muddy, wet, and unstable ground conditions—ideal for use in construction, landscaping, utilities, events and leisure industries.

Manufactured from 100% recycled high-density polyethylene, TrakMAT is durable and weather-resistant. The flexible construction allows the mats to contour along undulating or sloping ground conditions, preventing rutting or damage to turf. Mats are lightweight and include hand holes for fast, easy set up.

- Unique power cylinder traction design provides impressive grip
- No lost time because of stuck vehicles or equipment
- Power cylinder nubs are aligned for easy handling when stacked—mats slide off the stack without getting stuck
- Connect together to build a roadway or working platform in minutes—use accessory connectors to ensure a firm and secure trackway
- Cool green color reduces heat absorption—gentle on grass
- Mat-Pak bundles are available, offering a complete, convenient package ready to load onto your truck bed—includes 12 mats, 20 single connectors, 2 Handi-Hooks, 2 ratchet straps and a metal skid rack
- Six-year limited warranty

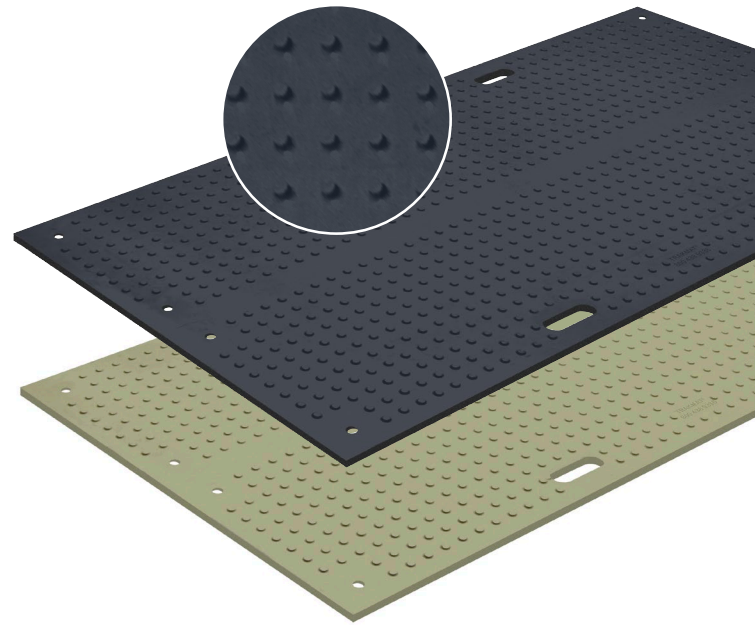

Load capacity*	90 tons (180,000 lb; 81,647 kg)
Surface tread	Two standard options: 1) Power cylinder nub (both sides) or 2) Power cylinder nub/smooth
Material	100% recycled high-density polyethylene (HDPE)
Thickness	0.5 in (1.27 cm)
Color options	Black or Cool Green

\* Load bearing capacity is subject to ground conditions.  
Sizing is subject to a manufacturing variance of +/- 5%.

Power Cylinder Nub (both sides) Models	Power Cylinder Nub/ Smooth Models	Description	Width	Length	Weight	CA Prop 65
TM2296-B	TM2296-1S-B	Black Mat	22 in (0.56 m)	8 ft (2.44 m)	39 lb (18 kg)	⚠
TM3696-B	TM3696-1S-B	Black Mat	36 in (0.91 m)	8 ft (2.44 m)	64 lb (29 kg)	⚠
TM4496-B	TM4496-1S-B	Black Mat	44 in (1.12 m)	8 ft (2.44 m)	78 lb (35 kg)	⚠
TM2296-G	TM2296-1S-G	Cool Green Mat	22 in (0.56 m)	8 ft (2.44 m)	39 lb (18 kg)	—
TM3696-G	TM3696-1S-G	Cool Green Mat	36 in (0.91 m)	8 ft (2.44 m)	64 lb (29 kg)	—
TM4496-G	TM4496-1S-G	Cool Green Mat	44 in (1.12 m)	8 ft (2.44 m)	78 lb (35 kg)	—

⚠ **WARNING:** This product can expose you to chemicals including carbon black, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).