




# Vehicle Identification Light

- Quickly identify heavy equipment and vehicles—visible day or night
- Features high-intensity LEDs for maximum visibility
- Durable construction withstands harsh conditions of mining, construction, industrial, utility, and oil & gas industries

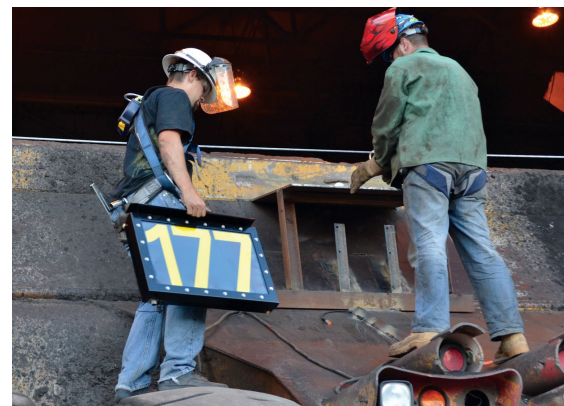

Large vehicle identification lights provide fast and easy identification of any type of equipment in heavy duty working environments. The numbering panel is constructed from a high intensity reflective material that is easy to read whether the sign is powered or off. Designed to withstand high-pressure washing and impact, these durable lights are built with heavy-duty materials to withstand the harsh weather and working conditions frequently experienced in mining, construction, and other industrial applications. Rated to perform from -60° F to 140° F (-50° C to 60° C).

## Increased Visibility

1/4 in thick yellow acrylic LED light diffuser spreads light evenly for increased visibility

## Highly Reflective

High intensity reflective material for increased visibility when sign is not powered

## Easy to Read

Easy to read block lettering during daylight hours with clear illumination at night



## Easy Connection

Waterproof Deutsch plug for easy connection

## Aluminum Frame

Durable frame with black powder coat finish is water tight and secured by multiple stainless steel bolts

## Exceptionally Durable Lens

Polycarbonate lens has over 200 times the impact strength of glass with excellent light transmission



Highly visible when sign is not powered




Reflective material allows for visibility at night if sign is not powered

## Front View - Rectangular Signs




## Side View



A = 1.625" Bolt Length

## Back View

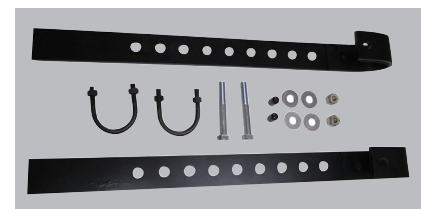

LUNMK-RAIL

Model	Description	Length	Height	Width	Volts	Amps	LEDs	Lumens	CA Prop 65
LUN24X16	Includes specified unit number, 12 ft power cord with Pigtail	24 in (61.0 cm)	16 in (40.6 cm)	2.8 in (7.1 cm)	24 V	2.5	210	4,095	⚠
LUNMK-RAIL	Optional mounting brackets. Railing mounting kit includes J-style mounting plates, U-bolts, and all necessary hardware for railing mounted applications.								—

NOTE: Please specify the number to be included on the sign when ordering.

**⚠ WARNING:** This product can expose you to chemicals including isopropylidenediphenol, methylene chloride, ethanol, ethylbenzene, hexane, lead, methanol, nickel compounds, and naphthalene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).