
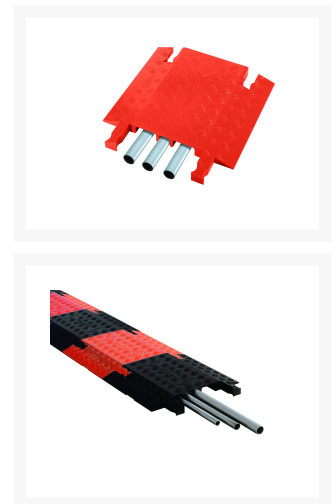


3-Channel Drop-Over Guard Dog® Cable Protector for 1.325" Lines, Orange - GD3-DO-O

Product Images

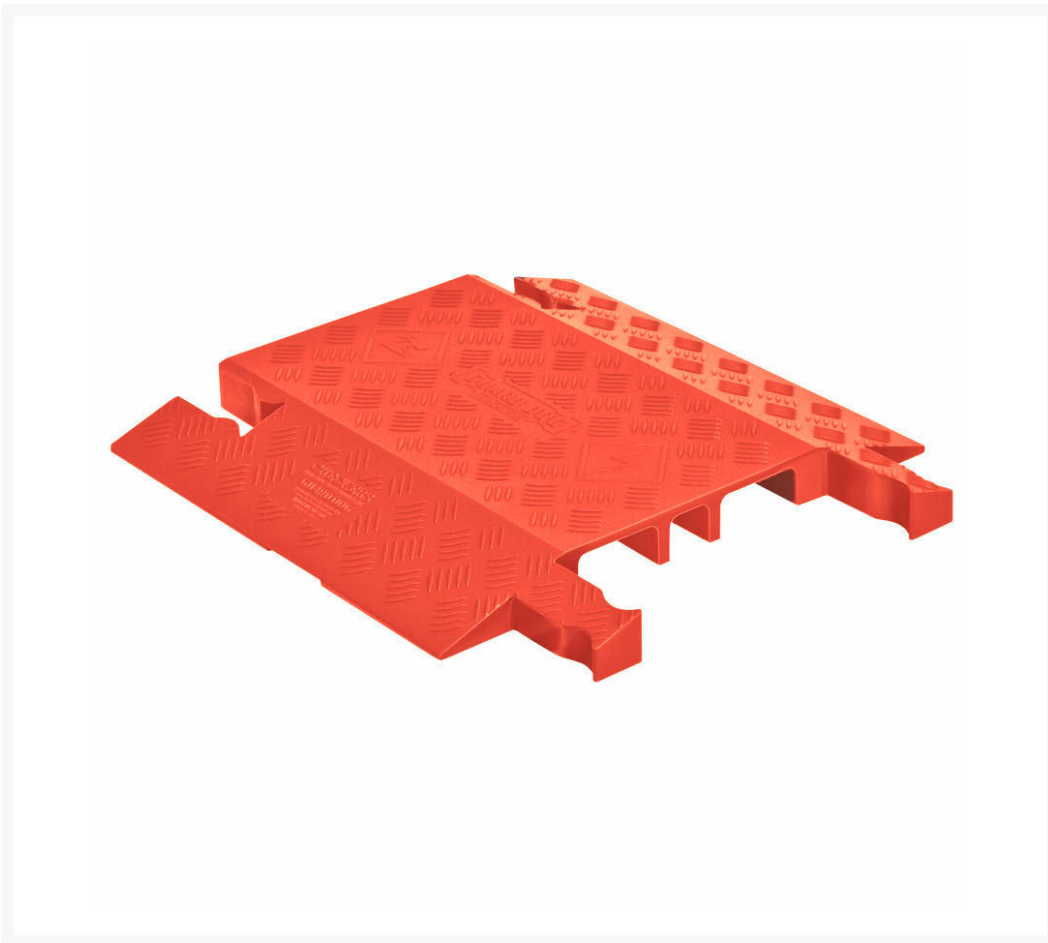

Short Description

- Protects Cables and Hoses Up to 1.325" Outside Dia.
- Dog-Bone® Connectors to Extend to Any Desired Length
- Fast Install with Drop-Over Design
- All-Weather Polyurethane Construction
- Patented 5-bar Tread Surface for Maximum Traction
- Connects to Standard Guard Dog 5-Channel

- Custom cable protectors are available. [Get a quote here.](#)

Description

Guard Dog® 3-channel drop-overs protect pipes, conduit, cable and hose lines that are permanently installed or mounted to the ground or floor. Drop-overs protect from above but do not prevent abrasion from below and should be used on a flat surface only. Ideal for providing a safe crossing for vehicles and pedestrian traffic in public, commercial and industrial applications. This 3-channel drop-over System features two extra wide channels to accommodate various quantities and sizes of lines up to 1" tall and 1.65" to 3.2" wide. These lightweight, 18 in. long drop-overs are easy to store in service/utility trucks and use when needed.

Custom cable protectors can be made with different colors and embossed logos. [Get a quote with your specific requirements.](#)

Specifications

Model No	GD3-DO-O
UPC	812958004456
Color	Orange
Quantity Included	1
Pallet Quantity	100
Load Capacity Per Axle	21000 lbs
Load Capacity Per Tire	10500
Max Cable Outside Diameter (Inches)	1.325
Number of Channels	3-Channels
Connector Type	Dog Bone Connector
Channel Width	3.2

Prop 65

⚠️WARNING: This product can expose you to chemicals including Carbon Black, Titanium Dioxide, Formaldehyde, and Benzyl Butyl Phthalate, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.