


# 8ft Super Whip Lighted Warning Whip with White LED and 12" Orange Flag with Yellow Reflective X - SW8W

## Product Images

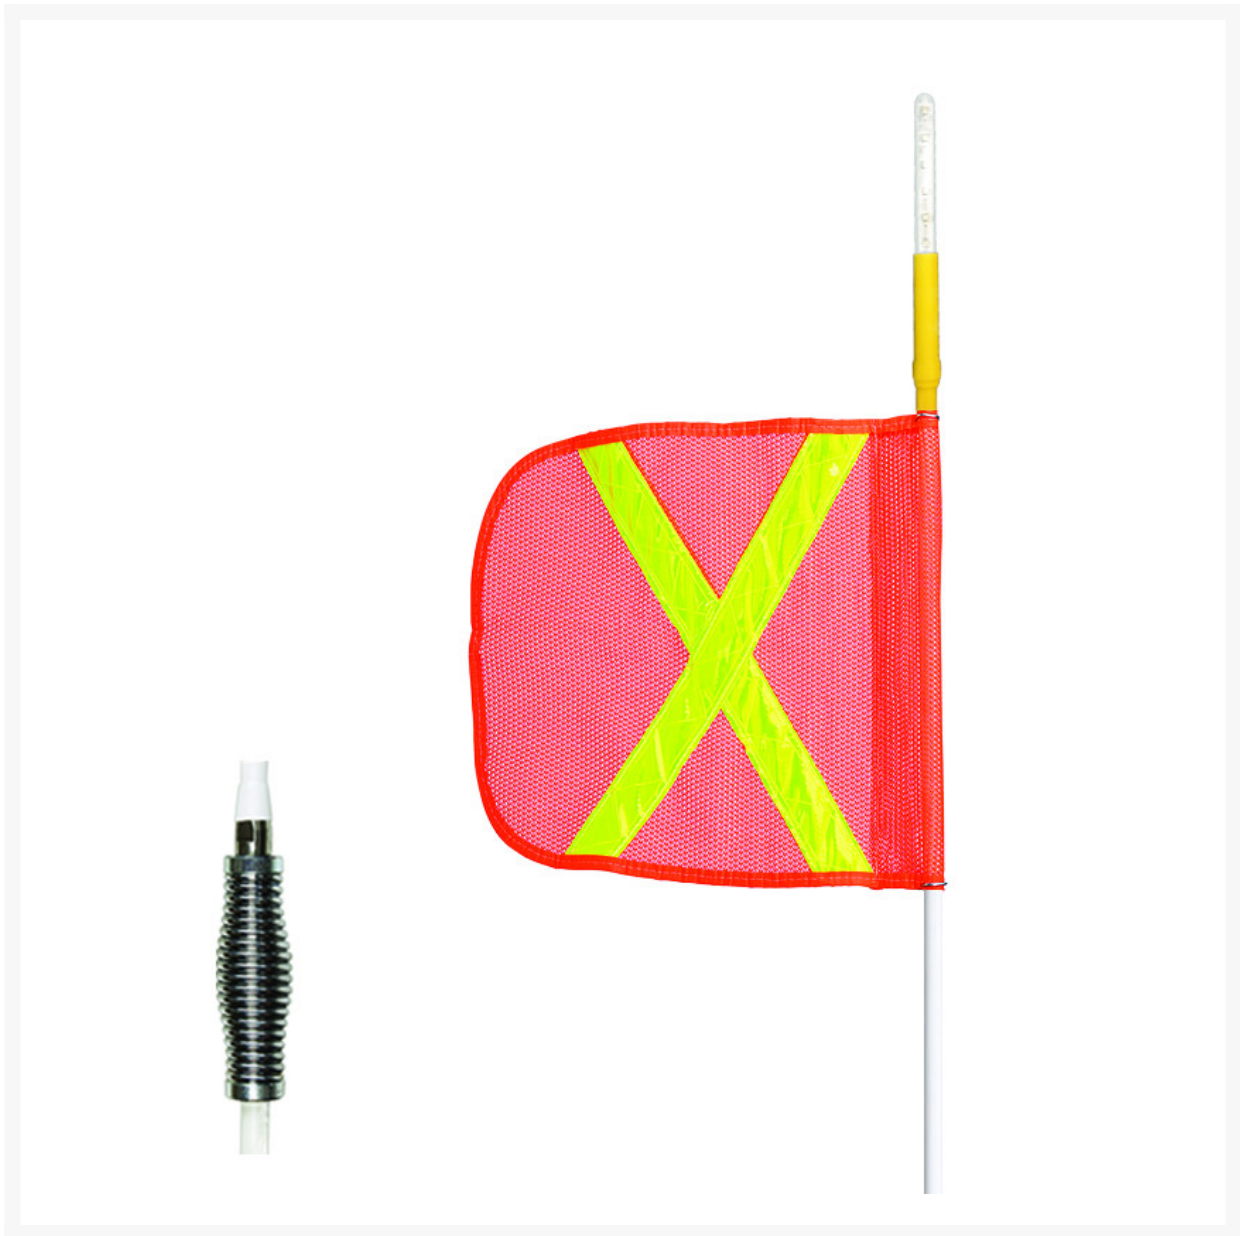

## Short Description

---

- 3, 5, 6, 8, 10, or 12 foot lengths available
- Includes chrome plated, ultra heavy duty spring mount with 18" pigtail
- Heavy duty Day Bright™® Florescent orange nylon mesh flag with yellow 3M® Scotchlite® reflective X
- Comes with a solid amber 12-LED light
- Whip constructed of premium fiberglass resin
- High-quality continuous power cable from light to base

## Description

---

Super Whips heavy-duty lighted warning whips with stainless steel threaded mounting base are designed without a lamp socket connection to eliminate failures often caused by socket corrosion. Super Whips heavy-duty lighted warning whips include a sealed electrical connection with 18" pigtail, nylon-mesh flag, flexible fiberglass whip and an ultra Heavy-duty spring, Day Bright™® fluorescent orange nylon mesh flag with yellow 3M® Scotchlite® reflective X, premium fiberglass resin whip, and these whips are wired with a high-quality power cable that is integrated directly into the whips, which eliminates potential breaks to the internal wires. They also include a polyolefin heat-shrink tubing to contain the fiberglass and prevent personal injury from fiberglass deterioration or fractures in the fiberglass whip. Super whips are engineered with a cold temperature rating of -75 C/-10° F. These whips are available in 3, 5, 6, 8, 10 or 12 foot lengths and come with a solid amber 12 LED light and a 12" x 11" orange flag with a yellow 3M® Scotchlite® reflective X.

## Specifications

---

Model No	SW8W
UPC	812542026543
Color	white
Quantity Included	1
Whip Length	109
Whip Width	2
Whip Height	2
Whip Light Color	White
Whip Light Flashing/Solid	Solid
Flag Size	12 in.
Flag Color	Orange
Flag Reflexite Color	Yes
Whip Base Type	Spring Mount
Volts	12-24
Whip Light LEDs	12
Whip Type	Heavy-Duty
Whip Rod Type	Lighted
Flag Shape	Square
Whip Pole Length (ft)	8 ft.
LED Strip Color	White