



4' x 8' VersaMAT® Ground Protection Mat, One Smooth Side, Hand Holes, 95 Ton Capacity, Black - VM48S1HH8

Product Images

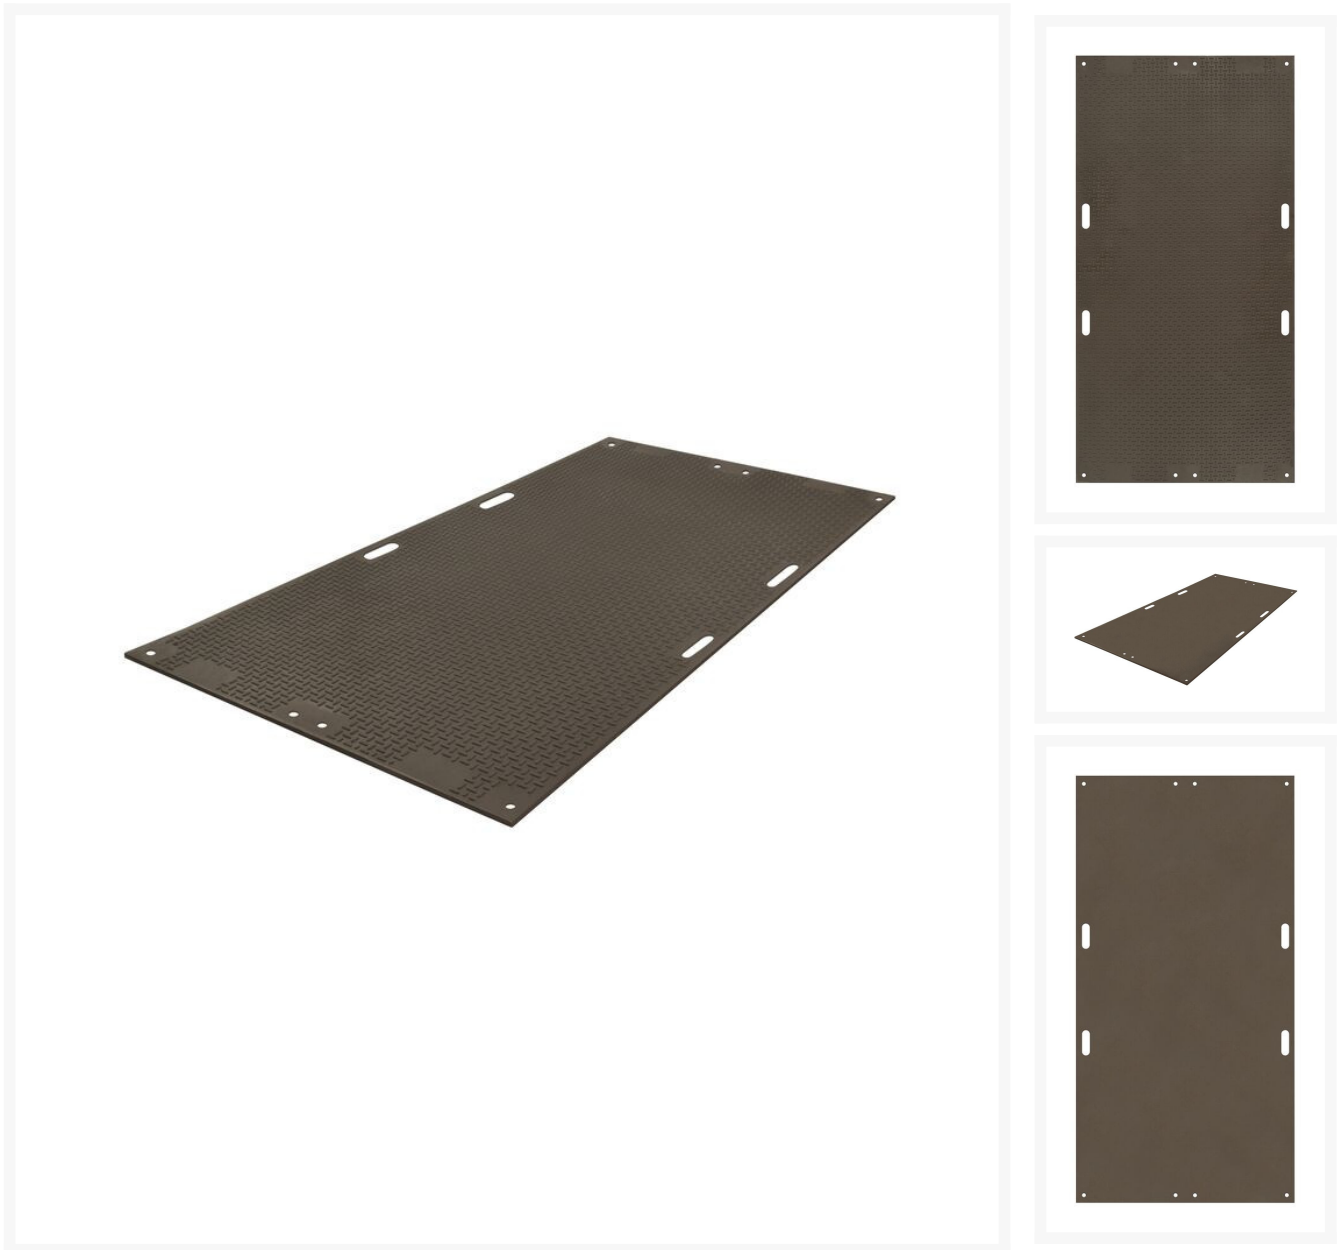

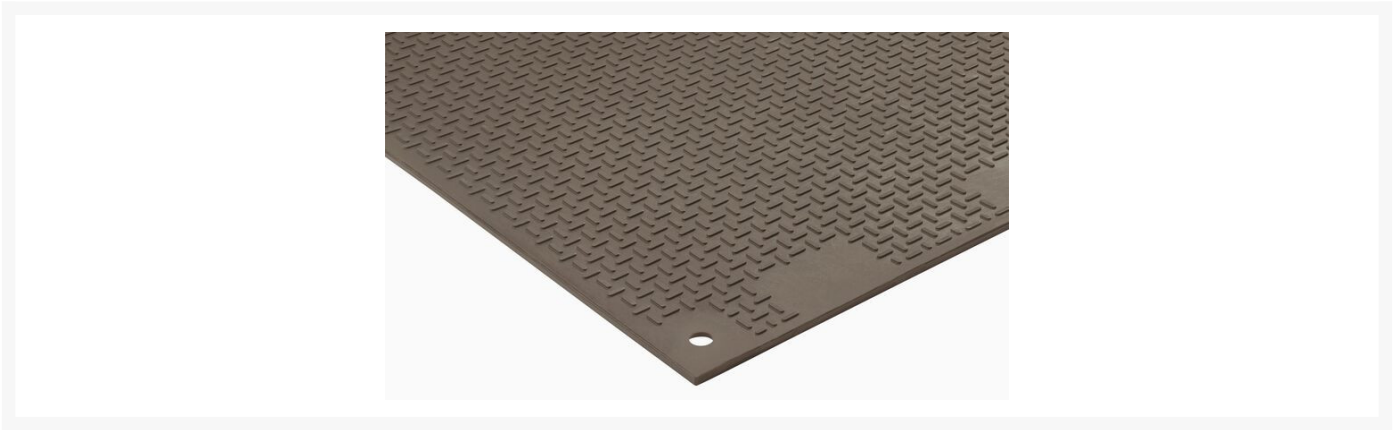

Short Description

- 100% recycled high-density polyethylene (HDPE)
- Low-profile slip-resistant traction surface provides impressive grip
- Supports loads of up to 95 tons* - dependent on sub-surface
- Available in black or clear
- Connect together with [Turn-A-Links](#) to form a continuous roadway or work pad
- Man-deployable
- Contours to different ground conditions due to its flexible design
- Also available with a smooth surface
- Limited Lifetime Warranty

Description

VersaMAT® was developed to be a more multi-functional ground protection mat for use where a user is looking for the additional benefit of a walking or standing/working surface with a heavy load capacity for construction equipment. VersaMAT® features a low-profile slip-resistant traction surface making it ideal for pedestrian applications. The standard VersaMAT® has the aggressive [AlturnaMAT®](#) tread on one side but is also available with a smooth surface making it truly versatile. Featuring a high load-bearing capacity of 95 tons*, VersaMAT® can also be used as a vehicle track way, vehicle parking area, or staging area for supplies and equipment. Weighing just 86 lbs (39 kg) at its maximum size, VersaMAT® can be easily be deployed by hand. VersaMAT® is manufactured from 100% recycled high-density polyethylene, making it durable and resistant to all weather conditions. VersaMAT® has a flexible construction meaning that the mat will follow the contours of the ground delivering a highly effective access solution on sloping or undulating ground conditions. VersaMAT® can be connected together using our flat [Turn-A-Links](#) connectors ensuring you have a firm and secure trackway.

*Load bearing capacity is subject to ground conditions. Sizing is subject to a manufacturing variance of +/- 5%.

Specifications

Model No	VM48S1HH8
UPC	810043330343
Brand	Checkers Safety™
Color	Black
Quantity Included	1
Load Capacity	209,000 lbs or 95 Tons
Load Capacity	95
Length (Inches)	96
Width (Inches)	48
Height (Inches)	0.72
Surface	Tread on one side / Smooth on one side
Hand Holes	Yes

Prop 65

⚠️WARNING: This product can expose you to chemicals including Carbon Black, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.