
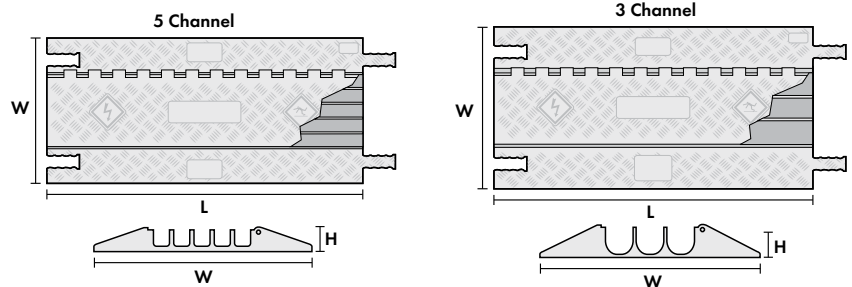
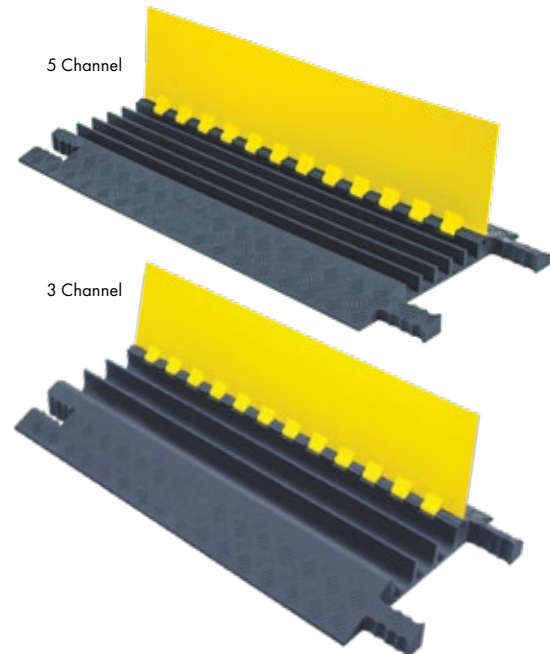


Grip Guard Cable Protectors are lightweight and easy to use. Made from maintenance-free urethane, Grip Guard is up to 75% lighter than comparable rubber models—without compromising the required strength and durability.

The gripper connector is ergonomically designed to fit your hand, which allows for easy handling and transport. This connector locks multiple cable protectors tightly together to provide a safe crossing for vehicle and pedestrian traffic while protecting valuable electrical cables and hose lines. Ideal for use in most public entertainment venues, light commercial, and utility applications where cable protection is needed.

- Patented 5-bar tread pattern for maximum traction
- Made from tough, high impact absorbing, non-conductive urethane
- Resistant from oil, fuels and lubricants
- Recessed carrying handle molded in to the underside of the protector
- Optional Anti-Slip Traction Kits for use on carpet or slick surfaces
- Available with standard yellow lid/gray base 




Load Capacity
Max load tested at 70°F (21 °C)
5,000 lb/Tire (2,267 kg)
10,000 lb/Axle (4,534 kg)

WARNING: Not intended for use with forklifts. Only light vehicle or pedestrian traffic.

Model	Description	Length	Width	Height	Channel Width	Maximum OD	Weight	Prop 65
GG5X125-Y/GRY	5 channel	36 in (91.4 cm)	16.44 in (41.76 cm)	1.59 in (4.04 cm)	1.25 in (3.18 cm)	1.25 in (3.18 cm)	12.75 lb (5.78 kg)	⚠
GG3X225-Y/GRY	3 channel	36 in (91.44 cm)	18.21 in (46.25 cm)	2.69 in (6.83 cm)	2.25 in (5.72 cm)	2.25 in (5.72 cm)	23.0 lb (10.43 kg)	⚠

Anti-Slip Traction Kits

Model	Description	Weight	Prop 65
CPRPKIT1-8	Anti-Slip Rubber Pad Kit for Grip Guard Cable Protectors (includes 8 anti-slip rubber pads)	.11 lb (.05 kg)	⚠
CPGLUE	½ oz. Bottle of Checkers Clear Super Glue (best if kept refrigerated). Use for permanent application of Anti-Slip Rubber Pads	.07 lb (.032 kg)	⚠
CPCARPETKIT-3	Carpet Kit with Velcro® Brand Fasteners (includes two 37 in x .25 in Black Traction Strips and a ½ oz bottle of Checkers Clear Super Glue)	.09 lb (.041 kg)	⚠

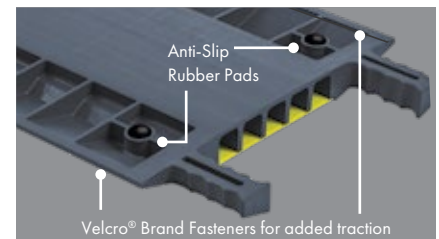

⚠ WARNING: This product can expose you to chemicals including carbon black, titanium dioxide, formaldehyde, and benzyl butyl phthalate, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

Checkers

620 Compton St
Broomfield, CO 80020

Phone: (800) 438-9336

Fax: (720) 890-4858

Email: sales@checkers-safety.com

Checkers-Safety.com